

More information

For more information, you can access our website www.digi-belgium.be/en/userguide

Customer Care

You can contact our Customer Care Department via our website or via phone: 0800 41 041

Environmental recycling

Please do not throw away the WiFi router with household waste. Always comply with the applicable regulations.

Violators are subject to the sanctions and measures established by law.

The cardboard box, the plastic contained in the packaging and the parts that make up the device can be recycled in accordance with the recycling regulations in force in Belgium.



EC Declaration of Conformity

Hereby, ZTE declares that the product ZTE - H3601P is in compliance with the requirements of Directive 2014/53/EU.



DIGI

Make a good call.

ZTE H3601P



DIGI Fiber

How to connect your DIGI Internet Box to the internet, easily and quickly?


Just follow these 3 steps.



Step 1. Installation and connection

Connect one end of the Ethernet cable 2 to the "WAN" port of the router and the other end to the Ethernet (LAN) port of the ONT.

The ONT, its power supply, and the optical Fiber cable are not included in this box.

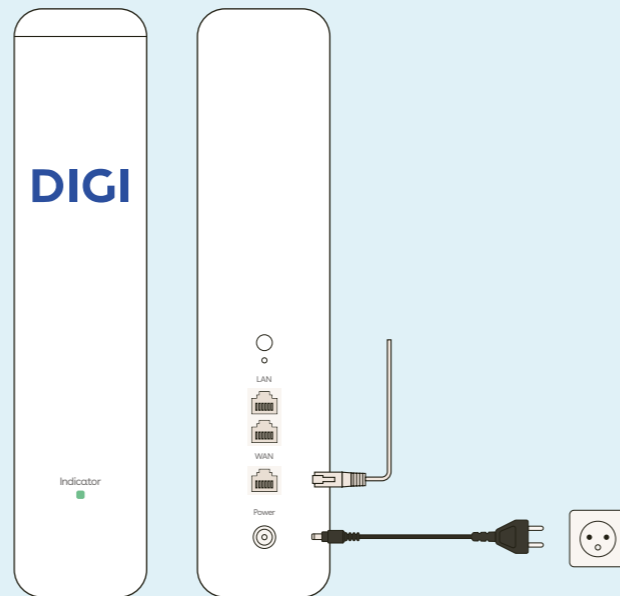

Step 2. Powering up the router

Plug the WiFi router. Wait a few minutes until the indicator becomes green.

The routers supplied by DIGI are optimized to connect to the internet without the need for installation or configuration.

Step 3. Get connected to the internet

You can connect in two different ways:

1. Connecting via wireless network

You can use the wireless WiFi connection as long as your device has a wireless adapter installed or it is integrated in your computer. The network and password are located on the back of the WiFi router.

2. Connection via Ethernet cable

Connect an Ethernet cable 2 to the computer's Ethernet input and to one of the router's connectors: LAN1 or LAN2. Turn on the computer and the LAN indicator light will turn green after a few seconds. This means that the connection is successful.



Please note that the wifi connection speed is lower than the speed provided by the Ethernet cable and depends, among other factors, on the distance you are from the router and the connection speed of your device.

 
Reset to factory defaults

Press the Reset button (Top button in the back) of the WiFi router for at least 10 seconds and then release it. After 30 seconds it will return to factory settings.

Contents of the box



1 Router WiFi

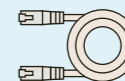

2 Ethernet Cable



3 Power supply